

Fiskars® Finger Tip Swivel Knife

1. Description

- Event easier to cut thanks to the swivel blade, ideal for cutting wires
- Complete control at fingertips
- To be hold like a pen
- Cuts wherever the finger is pointing
- Replacement blades available



Protection cap to
protect the blade

Thread the cutter onto
your finger and hold it
like a pen, between the
thumb and the middle
finger

2. How to use the Finger Tip Swivel Knife:

- For best results when cutting, you must ensure that the Finger Tip Swivel Knife has been adjusted to suit the type and depth of paper you use. Adjust the depth of the blade by your hand pressure.

- **Right cutting**



- When using the Finger Tip Swivel Knife, you need to use a mat to protect your work surface.
- The Fiskars® transparent cutting mat (ref 8610 or 8608) allows you to protect your work surface and extends the use of your cutting tools.
- One side has a self-healing surface for cutting and the other side is useful for painting, collages, felt pens and other projects.
-
- The craft mat is flexible: it enables a smoother cut when using the Finger Tip Swivel Knife.



- Never use the Swivel Knife to cut shapes with the Fiskars® Shape Template™: Both are swivel blades but are different. The one of the ShapeCutter™ is smaller and is surrounded by plastic at the top : it is more stable and it avoids to cut the templates. The cutting with a FingerTip Art Knife may be less regular.
- Never use the Finger Tip Swivel Knife with soft plastic stencils: the blade may cut the plastic and the stencil could be unusable.

3. How to replace the Finger Tip Swivel Knife blade:

To replace the blade, you must twist the collar counter- clockwise to release. Remove the metallic cap and replace the blade inserting a new one, replace the cap and tighten by twisting the neck.

