


Fiskars® Softgrip Art Knife

- Ergonomic handle for easy control
- All over Softgrip for comfort
- Strong protective sheath
- Uses standard blades
- Maximum thickness : **250gr, recommended 210g**


1. Features

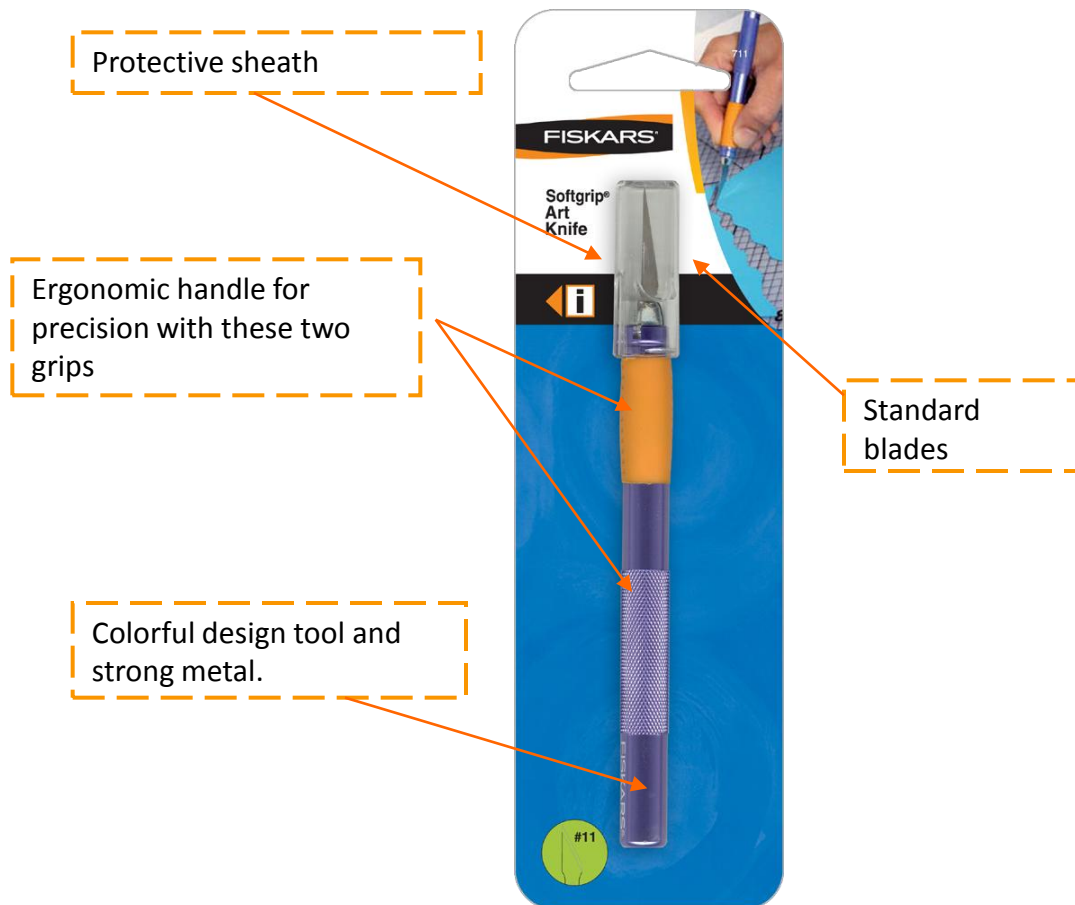

2. How to use the Softgrip Art Knife:

For best results when cutting, you must ensure that the Softgrip Art Knife has been adjusted to suit the type and depth of paper you use. Adjust the depth of the blade by your hand pressure.

Right cutting

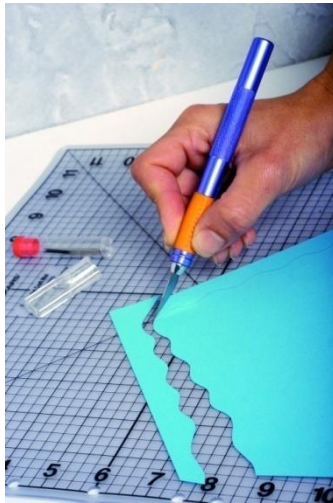

When using the Softgrip Art Knife, you need to use a craft mat to protect your work surface.

The Fiskars® transparent cutting mat (ref 8610 or 8608) allows you to protect your work surface and extends the use of your cutting tools.

One side has a self-healing surface for cutting and the other side is useful for painting, collages, felt pens and other projects.

The craft mat is flexible: it enables a smoother cut when you use the Softgrip Art Knife.



3. Changing the blade

When changing the blade, you must twist the collar clockwise to release and then twist anti clockwise to tighten.

To protect extra blades of the Softgrip Craft knife, you can store them in the transparent compartment.



For security reasons, never leave your Art Knife without its cap: this may damage the blade.



Tip:

You can use the Fiskars® sewing cutting mats A2 and A3 or craft mats from other brands, even non-healing mats.
