

Fiskars® Finger Tip Art Knife

1. Description

- Complete control at finger tip
- Cuts wherever the finger is pointing
- To be hold like a pen
- Thread the cutter onto your index for better control
- To be used with a craft mat
- Replacement blade available
- Maximum thickness : **250gr, recommended 210g**



2. How to use the Finger Tip Art Knife:

- For best results when cutting, you must ensure that the Finger Tip Art Knife has been adjusted to suit the type and depth of paper you use. Adjust the depth of the blade by your hand pressure.

- **Right cutting**



- When using the Finger Tip Art Knife, you need to use a mat to protect your work surface.
- The Fiskars® transparent cutting mat (ref 8610 or 8608) allows you to protect your work surface and extends the use of your cutting tools.
- One side has a self-healing surface for cutting and the other side is useful for painting, collages, felt pens and other projects.
-
- The craft mat is flexible: it enables a smoother cut when using the Finger Tip Art Knife.



3. How to replace the Finger Tip Art Knife blade:

To replace the blade, you must twist the collar counter- clockwise to release. Insert new blade in the slot and tighten by twisting the neck.



Tip:

You can use the Fiskars® sewing cutting mats A2 and A3 or craft mats from other brands, even non-healing mats.
